

Airport Acceleration™, Airport Addicted™, Airport Antidote™

Gain maximum use of your camera equipment, laptop, monopods and tripods by tailoring these flexible backpacks for your specific needs!

Laptop Case in Front Pocket



Think Tank laptop cases slip into the front pocket, and are protected by top flap and clip.

Removable Waistbelt



The waistbelt is optional. If you prefer, unthread the webbing through the buckle and tuck the extra webbing under the back pad.

Monopod Attachment



A monopod will easily attach to the side by placing the bottom into the lower stretch pocket and tightening the straps around the monopod.




Step 1: Remove the strap labeled "Monopod Strap."



Step 2: Place the strap under the webbing loop as shown, matching the hook and loop together.



Step 3: Thread the buckle as shown.

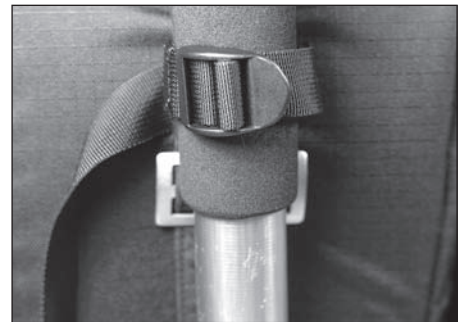

Step 4: Attach the monopod. Wrap excess strap around the monopod and under the webbing on the backpack.

Tripod Attachment



Small- to medium-size tripods can be attached to the side of the backpack by putting two legs into the stretchable bottom pocket and then attaching it with two tripod straps.



Step 1: Locate the "tripod strap" with the two buckles inside of the backpack.



Step 2: Thread the tripod straps under the webbing near the top of the bag and directly above the stretch pocket (2 locations).



Step 3: The side release buckle should be located on the side of the tripod. Adjust the strap position on the bag so it is in this position.



Step 4: The ladder lock buckle should also be located on the side of the tripod. Use this buckle to tighten the strap.

Large Tripod Attachment



Using the "Tripod Cup" a larger tripod can be attached to the side of the bag.



Step 1: Locate the Tripod Cup inside of the backpack.



Step 2: Attach the Tripod Cup to the buckle located on the side of the backpack.



Step 3: Use this buckle to adjust the Tripod Cup up and down, to fit the correct length of your tripod.