

Step-1
Remove all of the buckles
except for one as seen in this
photo.




Step-2
Weave the belt into the first
strap as shown.



Step-3
With a second Tr-Glide buckle seal
the pouch strap secure.



Step-4
Sandwich the 2nd pouch
strap as shown with the
belt straps.

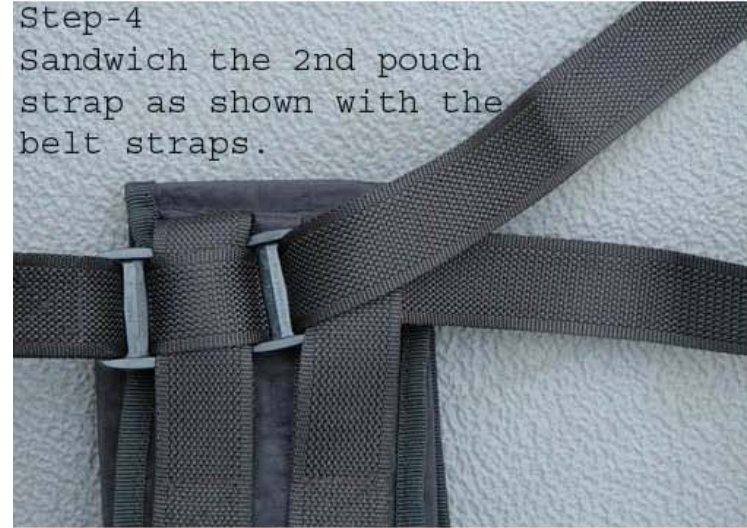

Step-5
Seal 2nd pouch strap with buckle



Step-6
First pouch is now sealed tight to
the belt and will not move.



Step-7
Repeat steps 2-6 and secure




the second pouch to the belt.

Step-8
Attach a 3rd, 4th, or 5th
pouch as needed to the
belt.



Step-9
End by placing the
wide mouth
buckle

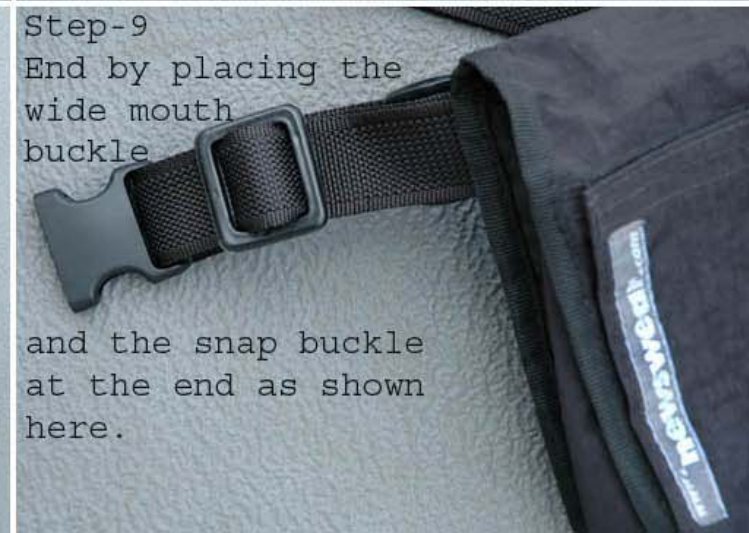

and the snap buckle
at the end as shown
here.